

1.Linux Driver(CUPS Driver) Installation.

1-1) Install Driver

- 1) Double Click **hwacups-x.x.x.deb**
- 2) Click **'(Package Install)'**
- 3) Enter the Pass word and then click **'(confirm)'**.
- 4) After a while, click **'Close'** to exit the setup program.
- 5) Click **'(System) -> (Print)'** to open print window, and then click **'+'** button on top of left side.
- 6) When 'Select Device' window appears, select **'(etc)'**, type **'parallel:/dev/usb/lp0'** on enter Device URL text box, and the click **'(Forward)'**(Based on USB).




Parallel: parallel:/dev/lp0,

Ethernet: Choose **'(Network Printer)'** -> **Jet Direct**, and then type IP address.



- 7) Choose HWASUNG On **'(Manufacturer)'** and then click **'(Forward)'**.

- 8) Choose your model and driver, and then click **'(Forward)'**.

- 9) Printing test page as required.

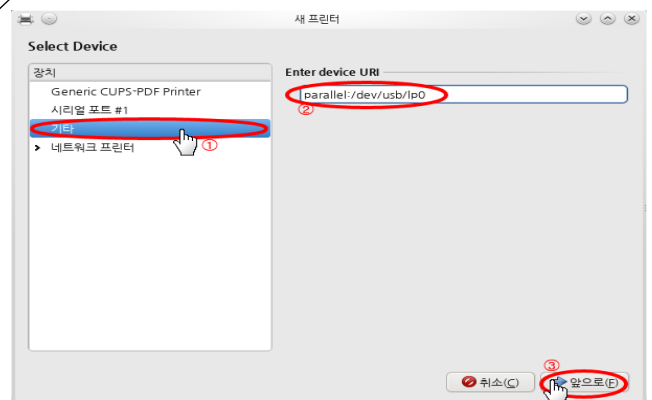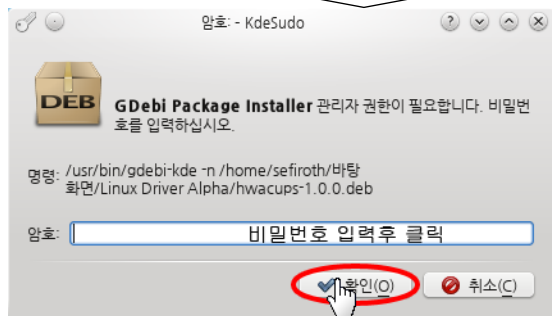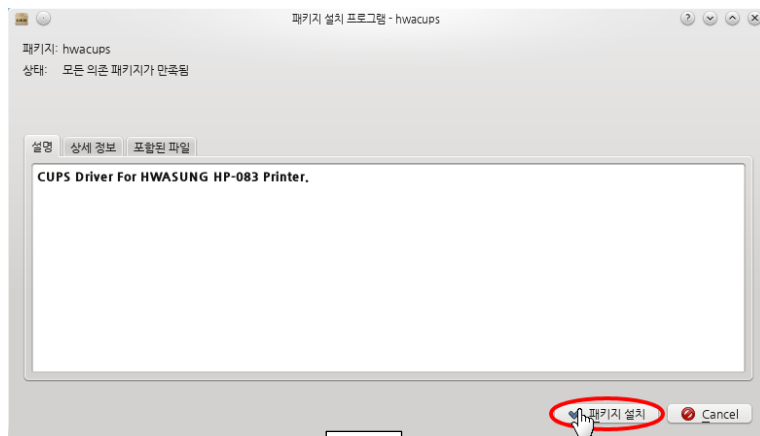

	Title	Rev.	Page
	Linux Driver	Ver(32/64,Ubuntu,Redhat	P.1

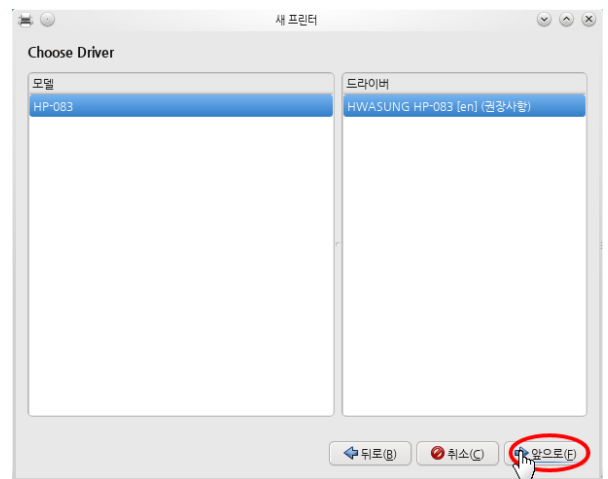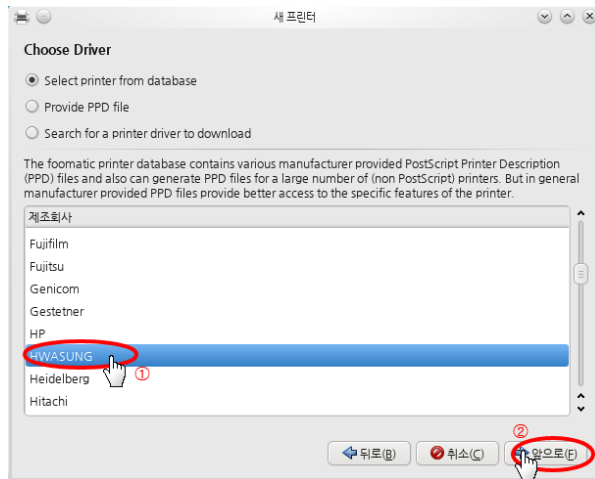


1-2) Set Print Option

1) Double click HP-083 on print window, select '(Print Option)' on the left menu. => Example Model here is HP-083, but it could be other models in our company Printer series based on current time.

2) Set it up according to your environment, click '(Apply)' and save data.

※Set option is same as Windows Driver.

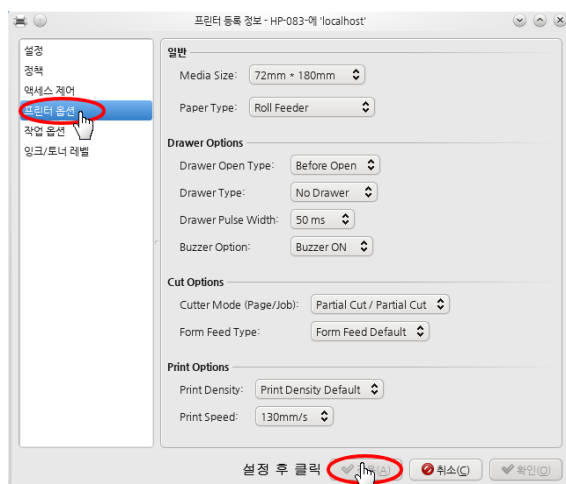

1-3) removing driver

1) Right-click HP-083 on print window, and press '제 (Delete)'.

2) Open terminal, type '\$ sudo dpkg-r hwacups'

3) Uninstall is completed.

```
sefiroth : bash
파일 편집 보기 스크롤백 책갈피 설정 도움말
sefiroth@sefiroth-desktop:~$ sudo dpkg -r hwacups ← 입력 후 엔터
[sudo] password for sefiroth: ← 비밀번호 입력 후 엔터
(데이터베이스 읽는중 ...현재 160444개의 파일과 디렉토리가 설치되어 있습니다.)
hwacups 패키지를 지우는 중입니다 ...
sefiroth@sefiroth-desktop:~$ ← 제거 완료
```